

**Physical Address:**


CRANE Instrumentation & Sampling  
 405 Centura CT,  
 Spartanburg, SC 29303-6603  
 Phone: (864) 574-7966  
 Fax: (864) 587-5608  
 Email: [Click Here](#)

**Mailing Address:**

HOKE  
 PO Box 4866,  
 Spartanburg, SC 29305-4866

**Item # 12PCM, Port Connector: PC**

connects two **fractional** ports

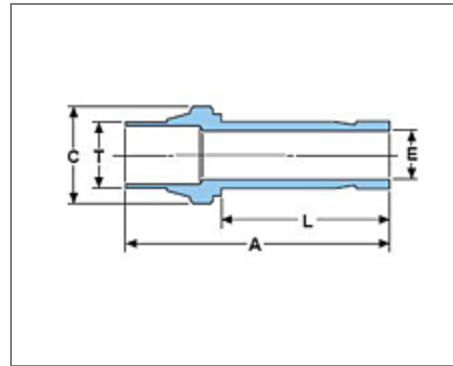

[Specifications](#) | [Installation Instruction](#)


## Specifications

**Material**

Monel

**T - Tube O.D.**

3/4 in

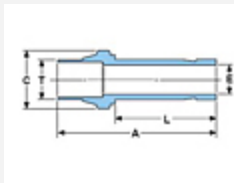**A**

1.83 in

**C**

0.94 in

**E Min**

.59 in

**L**

1.13 in

## Installation Instruction

**For Port Connector and Reducing Port Connector:**

1. Firmly insert machined ferrule end into fitting body.
2. Place nut only (no ferrules) over the machined ferrule. Finger-tighten.
3. Using wrench, turn nut until sharp rise in torque is felt. Snug tight. (Do not tighten 1 1/4 turns. No ferrules to set.)
4. Insert tube stub end into HOKE Gyrolok assembly.