




Physical Address:
 CRANE Instrumentation & Sampling
 405 Centura CT,
 Spartanburg, SC 29303-6603
 Phone: (864) 574-7966
 Fax: (864) 587-5608
 Email: [Click Here](#)

Mailing Address:
 HOKE
 PO Box 4866,
 Spartanburg, SC 29305-4866

Item # 12PCD50, Port Connector: PC

connects two **fractional** ports

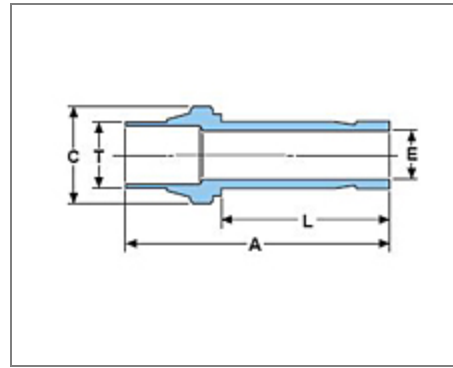

[Specifications](#) | [Installation Instruction](#)

Specifications

Material	Super Duplex 2507
T - Tube O.D.	3/4 in
A	1.83 in
C	0.94 in
E Min	.59 in
L	1.13 in

Installation Instruction

For Port Connector and Reducing Port Connector:

1. Firmly insert machined ferrule end into fitting body.
2. Place nut only (no ferrules) over the machined ferrule. Finger-tighten.
3. Using wrench, turn nut until sharp rise in torque is felt. Snug tight. (Do not tighten 1 1/4 turns. No ferrules to set.)
4. Insert tube stub end into HOKE Gyrolok assembly.